

Codes for Television

Abex	3026
Admiral	0120, 0490, 3001, 3027
Advent	0788, 0810, 0842, 0844, 0869
Adventura	3028
Aiko	0119, 3009
Aiwa	3195
Akai	0057, 0087, 0699, 0729, 0839, 3002, 3182, 3219, 3247, 3248
Albatron	0727, 0870
Alleron	3013
America Action	0207
Ampro	0778
Amtron	3012
Anam	0207
Anam National	3003, 3012
AOC	0057, 0205, 3004, 3005
Apex	3041, 3117, 3189
Apex Digital	0183, 0775, 0792, 0794, 0906, 3183
Audiovox	0119, 0207, 0478, 0650, 0829, 0902, 3012
Aventura	0198
Belcor	0205
Bell & Howell	0181, 3001, 3015
Benq	1059
Bradford	0207, 3012
Brilliant	3227, 3228, 3230
Brockwood	0205
Broksonic	0207, 0263, 0490, 3182, 3204
Candle	0057, 0205, 3005, 3006, 3028
Carnivale	0057
Carver	0081
Celebrity	0027, 3002
Celera	0792
Centurion	3007
Changhong	0792
Citizen	0057, 0087, 0119, 0205, 3005, 3006, 3009, 3012, 3022, 3025, 3203
Clarion	0207
Colorlyme	0205, 3005
Colt	3199
Commercial Solutions	0074, 1474
Concerto	0205, 3005
Contec	0207
Contec/Cony	3008, 3012
Craig	0207, 3012
Crosley	0081
Crown	0207, 3012, 3018
Curtis Mathes	0057, 0074, 0081, 0087, 0120, 0172, 0181, 0193, 0205, 0478, 0493, 0729, 1174, 1374, 3000, 3005, 3015, 3022, 3025
CXC	0207, 3012
Daewoo	0119, 0205, 0478, 0650, 0688, 0699, 1688, 3004, 3005, 3009, 3025, 3081, 3100, 3153, 3203
Daytron	0205, 3005, 3025
Dell	1107, 1205
Denon	0172
Dimensia	3000
Dumont	0044, 0205, 3024
Durabrand	0198, 0205, 0207, 0490, 1061
Dwin	0120, 0747, 0801
Electroband	0027, 3002
Electrograph	1782
Electrohome	0205, 3002, 3003, 3005
Element	3264
Emerson	0181, 0198, 0205, 0207, 0263, 0490, 0650, 3005, 3008, 3010, 3011, 3012, 3013, 3015, 3025, 3031, 3186, 3203, 3204, 3218

Envision	0057, 0205, 0840, 3005
Epson	0860, 0867, 3144
ESA	0198, 0839
Fisher	0181, 3014, 3015
Fujitsu	0710, 0836, 0880, 3013, 3159, 3160, 3162, 3163, 3164
Funai	0198, 0207, 3012, 3013, 3198
Futurtech	0207, 3012
Gateway	1782, 1783
GE	0074, 0078, 0205, 0478, 1174, 1374, 1474, 3000, 3003, 3005, 3016, 3017, 3037, 3124, 3200, 3201, 3208
Gibraltar	0044, 0057, 0205, 3024
Go Video	0913
Goldstar	0057, 0205, 3004, 3005, 3008, 3025, 3026, 3202
Grunpy	0207, 3012, 3013
Haier	1061
Hallmark	0205, 3005
Harley Davidson	3198
Harman/Kardon	0081
Harvard	0207, 3012
Havermy	0120
Helios	0892
Hello Kitty	0478
Hisense	0775
Hitachi	0172, 0205, 1172, 3005, 3008, 3039, 3044, 3180, 3198
HP	3253, 3254
Hyundai	0876
Ilo	3249, 3250, 3252
IMA	3012
Infinity	0081, 3018
Infocus	3255, 3256, 3257
Insignia	0198
Inteq	0044
Janeil	3028
JBL	0081, 3018
JC Penney	0205, 3000, 3004, 3005, 3006, 3016, 3017, 3022, 3025, 3026
JCB	0027, 3002
Jensen	0205, 0788, 0842, 0844, 3005
JVC	0080, 0758, 1280, 3008, 3017, 3019, 3070, 3096, 3097, 3101, 3134, 3174, 3175
Kawasho	0205, 3002, 3005
KEC	0207
Kenwood	0057, 0205, 3005
KLH	0792, 0794
Kloss Novabeam	3012, 3028
Konka	3032, 3238, 3239, 3240, 3241, 3242, 3243, 3244
KTV	0057, 0207, 3012, 3025
LG	0205, 0727, 0883, 1205, 1292, 3004, 3145
Lloyd's	3198
Loewe	3018
Logik	3001
Luxman	0205, 3005
LXI	0074, 0081, 0181, 0183, 0205, 3000, 3005, 3015, 3018
Magnasonic	3203
Magnavox	0057, 0081, 0205, 0733, 0829, 1281, 1481, 3005, 3006, 3018, 3046, 3047, 3056, 3098, 3102, 3154, 3198, 3212, 3218
Magnin	3200
Majestic	3001
Marantz	0057, 0081, 0205, 0731, 0882, 1181, 3005, 3018
Matsushita	0277, 0677
Maxent	1782
Megapower	0727

Megaltron	0172, 0205, 3005
Memorex	0177, 0181, 0205, 0490, 3001, 3004, 3005, 3015, 3105, 3106, 3197, 3202
MGA	0057, 0177, 0205, 3004, 3005, 3200
Midland	0044, 0074, 0078, 3017, 3024, 3025, 3026
Minutz	3016
Mitsubishi	0120, 0177, 0205, 0863, 0895, 1277, 3004, 3005, 3075, 3091, 3107, 3109, 3111, 3170, 3176, 3201
Monivision	0727, 0870
Montgomery Ward	3001
Motorola	0120, 3003, 3027
MTC	0057, 0087, 0205, 3004, 3005, 3022
Multitech	0207, 3012
Multivision	3020
NAD	0183, 0205, 0893, 3005, 3029
NEC	0057, 0205, 0524, 0909, 1731, 3003, 3004, 3005
Net-TV	1782
Nikko	0057, 0119, 0205, 3005, 3009
Norcent	0775, 0851
NTC	0119, 3009
Olevia	3131, 3226, 3231, 3232, 3233
Onwa	0207, 3012
Optimus	0181, 0193, 0277, 0677, 3029, 3197
Optoma	0914
Optonica	0120, 3021, 3027
Orion	0263, 0490, 1490, 3011, 3031, 3090, 3204
Panasonic	0078, 0277, 0677, 1437, 3003, 3017, 3018, 3036, 3038, 3049, 3057, 3061, 3063, 3065, 3068, 3079, 3086, 3092, 3104, 3110, 3112, 3113, 3122, 3129, 3130, 3133, 3135, 3149, 3152, 3177, 3185, 3191, 3193, 3194, 3197, 3209, 3215, 3217, 3223
Panavision	3216
Penney	0057, 0074, 0078, 0087, 0183, 0205, 1374, 3200, 3202
Philco	0057, 0081, 0205, 3003, 3004, 3005, 3006, 3008, 3018, 3106
Philips	0081, 0205, 0717, 1181, 1481, 3003, 3006, 3008, 3018, 3040, 3043, 3047, 3060, 3067, 3071, 3084, 3085, 3095, 3114, 3118, 3192, 3212
Philips Magnavox	3040, 3046, 3047, 3067, 3071, 3085, 3095, 3102
Pilot	0057, 0205, 3025
Pioneer	0193, 0205, 0706, 0893, 3005, 3029, 3108, 3115, 3157, 3165, 3179
Polaroid	0792, 0892, 3140, 3264
Portland	0119, 0205, 3004, 3005, 3009, 3025
Price Club	3022
Prima	0788, 0810, 0842, 0844
Princeton	0727, 0744
Prism	0078, 3017
Proscan	0074, 1374, 1474, 3000, 3124
Proton	0205, 0493, 3005, 3008
Proview	3224, 3225, 3234
Pulsar	0044, 0205, 3024
Pye	3258, 3259, 3260, 3261, 3262, 3263
Quasar	0078, 0277, 0677, 3003, 3017, 3197, 3209
Radio Shack	3015
Radio Shack/Realistic	0205, 3000, 3005, 3008, 3012, 3015, 3021, 3025, 3026

RadioShack	0057, 0074, 0181, 0205, 0207, 3198
RCA	0074, 0117, 0205, 0706, 1074, 1174, 1274, 1374, 1474, 1574, 3000, 3003, 3004, 3005, 3034, 3045, 3083, 3088, 3119, 3124, 3181, 3184, 3190, 3200, 3201, 3211, 3213
Realistic	0057, 0181, 0205, 0207, 3015
Runco	0044, 0057, 0524, 0630, 3024
Sampo	0057, 0205, 1782, 3005, 3025, 3026
Samsung	0057, 0087, 0205, 0729, 0793, 0839, 0841, 1087, 3004, 3005, 3008, 3022, 3025, 3026, 3058, 3094, 3127, 3128, 3136, 3137, 3148, 3156, 3172, 3205
Sansui	0490, 3031, 3048, 3090, 3182, 3198, 3204
Sanyo	0181, 0205, 0826, 0920, 3014, 3015, 3200
Scotch	0205, 3005
Scott	0205, 0207, 0263, 3005, 3008, 3011, 3012, 3013, 3251
Sears	0074, 0081, 0181, 0183, 0198, 0205, 3000, 3005, 3013, 3014, 3015, 3019, 3030, 3198, 3202
Sharp	0120, 0205, 0518, 0715, 0716, 0878, 3005, 3008, 3021, 3025, 3027, 3073, 3121, 3125, 3132, 3138, 3142, 3206, 3222
Sheng Chia	0120
Shogun	0205
Signature	3001
SIM2 Multimedia	3265
Simpson	3006
Sony	0027, 0861, 1127, 3002, 3050, 3054, 3069, 3077, 3103, 3116, 3123, 3126, 3143, 3150, 3151, 3155, 3178, 3198
Soundesign	0205, 0207, 3005, 3006, 3012, 3013
Squareview	0198, 3030
SSS	0205, 0207, 3012
Starlite	0207, 3012
Studio Experience	0870
Superscan	0120, 0891, 3218
Supre-Macy	3028
Supreme	0027, 3002
SVA	0775, 0892
Sylvania	0057, 0081, 0198, 0205, 3005, 3006, 3018, 3042, 3082, 3095, 3099, 3105, 3139, 3161, 3186, 3192, 3196, 3210, 3218, 3221, 3229, 3235, 3236, 3237, 3245, 3246
Symphonic	0198, 0207, 3010, 3012, 3030, 3064, 3198
Syntax	3131, 3231, 3232, 3233
Tandy	0120, 3027
Tatung	1783, 3003
Technics	0078, 0277, 3017
Techview	0874
Techwood	0078, 0205, 3005, 3017
Teknika	0081, 0087, 0119, 0177, 0205, 0207, 3001, 3004, 3005, 3006, 3008, 3009, 3012, 3013, 3022, 3025
Telecaption	3023
Telefunken	0729
Thomas	3198
TMK	0205, 3005
TNCI	0044
Toshiba	0087, 0181, 0183, 0677, 0859, 0872, 1172, 1183, 1283, 1292, 1383, 1683, 1731, 3015, 3022, 3023, 3051, 3052, 3053, 3055, 3059, 3062, 3066, 3072, 3074, 3078, 3080, 3087, 3089, 3093,

	3147, 3167, 3168, 3169, 3171, 3173, 3182, 3187, 3188, 3207, 3214, 3220
Totevision	3025
TVS	0490
Universal	3016
V Inc.	0912
Vector Research	0057
Victor	0080, 3019
Vidikron	0081
Vidtech	0205, 3004, 3005
Viewsonic	0884, 0891, 0912, 1782, 3141, 3154
Viking	3028
Viore	3252
Vizio	0891, 0912, 1783
Wards	0057, 0081, 0205, 0893, 1183, 3000, 3001, 3004, 3005, 3010, 3013, 3016, 3018, 3021
Waycon	0183
Westinghouse	0027, 0478, 0912, 0916
White Westinghouse	0490, 0650
Yamaha	0057, 0205, 0796, 0860, 0866, 3004, 3005
Zenith	0044, 0119, 0205, 0490, 1292, 3001, 3024, 3033, 3035, 3076, 3120, 3146, 3158, 3166, 3198, 3204

Codes for Video – VCR

ABS	1999
Admiral	0075
Adventura	0027, 3808
Aiwa	0027, 0064, 3808
Akai	3801, 3905
Alienware	1999
American High	0062, 3806
Apex Digital	3858
Asha	3804
Audio Dynamics	3802
Audiovox	0064, 3805
Beaumarck	3804
Bell & Howell	3803
Broksonic	0211, 1506, 3850, 3871, 3888
Calix	0064, 3805
Candle	3804, 3805
Canon	0062, 3806
Carver	0108
Citizen	0064, 1305, 3804, 3805, 3887
Colorlyme	3802
Colt	3884
Craig	0064, 0074, 3804, 3805, 3807
Curtis Mathes	0062, 0087, 0189, 1062, 3800, 3802, 3804, 3806
Cybernex	3804
Cyberpower	1999
Daewoo	0072, 1305, 3808, 3835, 3887
Davidson	0027
DBX	3802
Dell	1999
Dimensia	3800
DIRECTV	0766
Durabrand	0066
Dynatech	0027, 3808
Electrohome	0064, 3805
Electrohonic	0064, 3805
Emerex	0059
Emerson	0027, 0064, 0211, 1305, 1506, 3805, 3806, 3808, 3861, 3887, 3888, 3904
ESA	3844

Fisher	0074, 3803, 3807, 3842
Fuji	0060, 0062, 3801, 3806
Funai	0027, 3808, 3812, 3861, 3883
Garrard	0027, 3808
Gateway	1999
GE	0062, 0087, 0834, 1062, 1087, 3800, 3804, 3806, 3885, 3892, 3911
Go Video	3851, 3854, 3859, 3867, 3869
Goldstar	0064, 1264, 3802, 3805, 3886
Gradiente	0027, 3808
Harley Davidson	0027, 3808, 3883
Harman/Kardon	0108, 3802
Headquarter	3803
Hewlett Packard	1999
Hi-Q	0074, 3807
Hitachi	0027, 3883
Howard Computers	1999
HP	1999
Hughes Network Systems	0766
Humax	0766
Hush	1999
IBUYPOWER	1999
Instant Replay	3806
JC Penney	3802, 3803, 3804, 3805, 3806
JCL	3806
JVC	3802, 3803, 3822, 3828, 3832, 3833, 3846, 3847, 3848, 3849, 3868, 3878, 3879
KEC	0064
Kenwood	3802, 3803
Kodak	0062, 0064, 3805, 3806
LG	3805, 3845
Linksys	1999
Lloyd's	0027, 3808, 3883
LXI	0064, 3805
Magnasonic	1305, 3887
Magnavox	0027, 0062, 0066, 0108, 1808, 3806, 3829, 3836, 3840, 3883, 3898, 3904
Magnin	3805, 3885
Marantz	0062, 0108, 3802, 3803, 3806
Marta	0064, 3805
Matsushita	0062, 0189, 3806
Media Center PC	1999
MEI	0062, 3806
Memorex	0027, 0062, 0064, 0066, 0074, 0075, 0189, 1264, 3803, 3804, 3805, 3806, 3807, 3808, 3811, 3843, 3850, 3882, 38